

ASSEMBLY VIEW

PARTS OF PLANER RW2-82

DRG.SR.NO.	PART NO	DESCRIPTION	QTY / TOOL	DRG.SR.NO.	PART NO	DESCRIPTION	QTY / TOOL
1		BEARING	1	48	3225.1.29	SCREW	2
2	3830.3.23	ARMATURE ASSLY	1	49	3225.1.30	SCREW	3
3		BEARING	1	50	3511.1.44	SIDE BOARD	1
4	3225.1.15	SCREW	2	51	3511.1.45	BIG. B PULLEY (51+52)	1
5	3820.3.23	FIELD ASSLY	1	52	3511.1.46	SMALL B.PULLEY	1
6	3225.1.16	SCREW	4	53	3511.1.47	BELT	1
7	3280.1.16	HOUSING	1	54	3278.1.14	BELT COVER	1
8	3329.1.26	LEFT HANDLE	1	55	3225.1.31	SCREW	1
9	3225.1.17	SCREW	3				
10	3225.1.18	SCREW	1				
11	290.32	CABLE	1				
12	3380.1.13	CABLE SLEVE	1				
13	3279.1.16	CABLE CLAMP	1				
14	3330.1.23	SWITCH	1				
15		NAME PLATE	1				
16	3225.1.19	RIVET	2				
17	3329.1.27	RIGHT HANDLE	1				
18	3225.1.20	SCREW	2				
19	3225.1.21	SCREW	2				
20	3511.1.33	DEPTH SCALE	1				
21	3511.1.34	DEPTH AD. INGS	1				
22	3231.1.05	WASHER	1				
23		MARKING STICKER	1				
24	3225.1.22	SCREW	2				
25	3511.1.35	BITS GUIDED COVER	1				
26	3348.1.12	IRC. RETAINER	1				
27	3225.1.23	SCREW	2				
28	3231.1.06	INSULATION WASHER	1				
29	3252.1.19	BRUSH HOLDER	2				
30	3251.9.18	CARBON BRUSH	2				
31	3253.1.18	BRUSH HOLDER CAP	2				
32	3511.1.36	KNOB	1				
33	3511.1.37	GUIDE BRACKET	1				
34	3310.1.33	SPRING	1				
35	3231.1.07	WASHER	1				
36	3511.1.38	FRONT BOARD	1				
37	3225.1.25	SCREW	2				
38	3225.1.27	SCREW	4				
39	3511.1.39	REAR BOARD	1				
40	3511.1.40	COVER BOARD	1				
41	3511.1.41	BLADE	1				
42	3278.1.13	KNIFE COVER	1				
43		BEARING	2				
44	3511.1.42	BLADE C. AXLE	1				
45	3511.1.43	BRACKET	2				
46	3310.1.34	SPRING	2				
47	3225.1.28	SCREW	2				

