


Exploding View 12100D

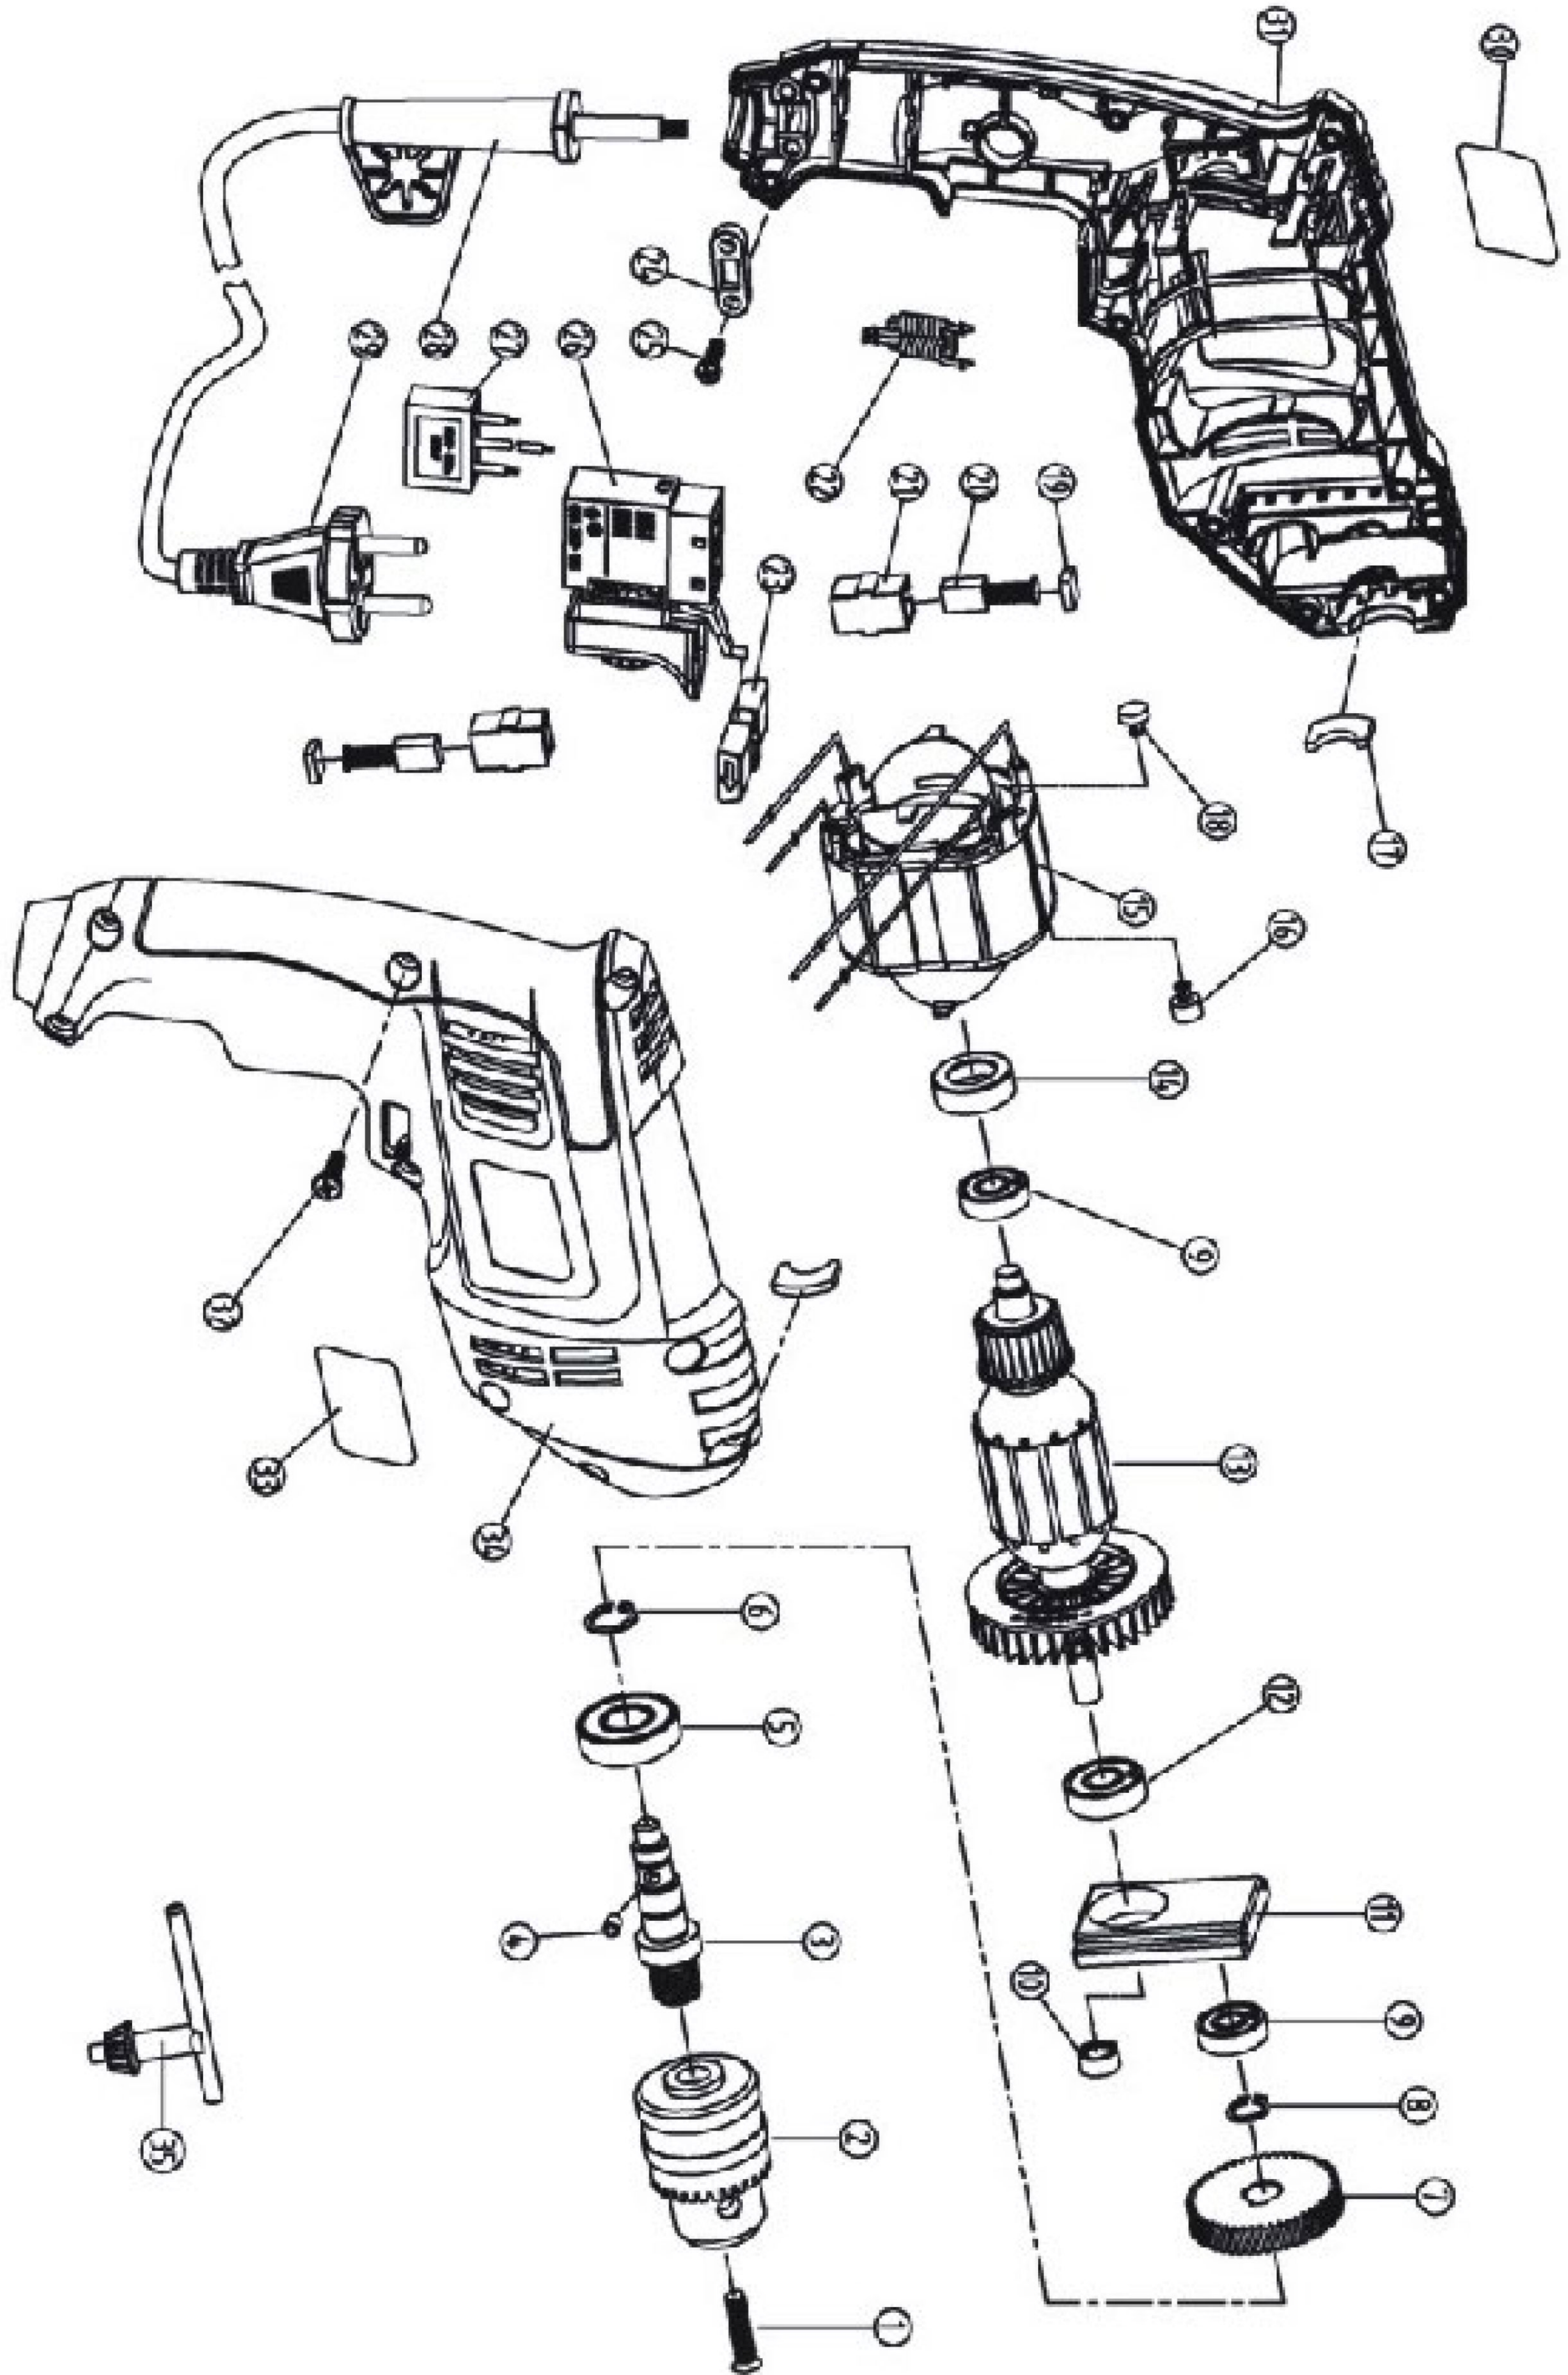

Model : 12100D

Explored View Nr.	Spareparts Name	Part No.
1	Left-threaded screw	3224.1.72
2	Chuck	328.3.05
3	Output spindle	3291.1.28
4	steel ball	3502.1.03
5	Rolling bearing NSK 6001	272.1.59
6	Snapping	3311.1.52
7	Drivengear	3300.1.08
8	Snapping	3311.1.53
9	Rolling bearing NSK 607	272.1.82
10	Nylong bushings	3274.1.26
11	Central support bracket	3365.1.08
12	Rolling bearing NSK 608	272.1.04
13	Rotor	3830.3.67 (stdv)
14	Bearing bushings	3274.1.06
15	Stator	3820.3.67 (std v)
16	Stator locator pin	3501.1.29
17	Felt Packing	3401.1.01
18	Stator locator pin	3501.1.30
19	Plastic block	3278.1.28
20	Carbon brush	3251.1.36
21	Brush housing	3254.1.01
22	Inductor	3402.1.01
23	Forwarder/ reverse knob	3510.3.02
24	Cable anchorage	3290.1.01
25	Self-tapping screw	3224.1.73
26	Switch	3330.1.38
27	Capacitor	3317.1.02
28	Cable protector	3290.1.02
29	Cable	3290.1.03
30	Left lable	3350.1.25
31	Housing	3385.1.07
32	Self-tapping screw	3224.1.74
33	Right label	3350.1.26
34	Upper housing	3385.1.08
35	Chuck key	502.1.05
36	Armature assy	3830.3.57 (110v)
37	field assy	3820.3.57 (110v)