

Model : 12100D

| Explored View Nr. | Spare parts Name | Part No. |
|-------------------|--------------------------|---------------------|
| 1 | Left-threaded screw | 3224.1.72 |
| 2 | Chuck | 328.3.05 |
| 3 | Output spindle | 3291.1.28 |
| 4 | steel ball | 3502.1.03 |
| 5 | Rolling bearing NSK 6001 | 272.1.59 |
| 6 | Snapping | 3311.1.52 |
| 7 | Drivengear | 3300.1.08 |
| 8 | Snapping | 3311.1.53 |
| 9 | Rolling bearing NSK 607 | 272.1.82 |
| 10 | Nylong bushings | 3274.1.26 |
| 11 | Central support bracket | 3365.1.08 |
| 12 | Rolling bearing NSK 608 | 272.1.04 |
| 13 | Rotor | 3830.3.67 (stdv) |
| 14 | Bearing bushings | 3274.1.06 |
| 15 | Stator | 3820.3.67 (std v) |
| 16 | Stator locator pin | 3501.1.29 |
| 17 | Felt Packing | 3401.1.01 |
| 18 | Stator locator pin | 3501.1.30 |
| 19 | Plastic blok | 3278.1.28 |
| 20 | Carbon brush | 3251.1.36 |
| 21 | Brush housing | 3254.1.01 |
| 22 | Inductor | 3402.1.01 |
| 23 | Forwarder/ reverse knob | 3510.3.02 |
| 24 | Cable anchorage | 3290.1.01 |
| 25 | Self-tapping screw | 3224.1.73 |
| 26 | Switch | 3330.1.38 |
| 27 | Capacitor | 3317.1.02 |
| 28 | Cable protector | 3290.1.02 |
| 29 | Cable | 3290.1.03 |
| 30 | Left lable | 3350.1.25 |
| 31 | Housing | 3385.1.07 |
| 32 | Self-tapping screw | 3224.1.74 |
| 33 | Right label | 3350.1.26 |
| 34 | Upper housing | 3385.1.08 |
| 35 | Chuck key | 502.1.05 |
| 36 | Armature assy | 3830.3.57 (110v) |
| 37 | field assy | 3820.3.57 (110v) |